


## BLOWER MOTOR

### ON-VEHICLE INSPECTION

#### 1. INSPECT BLOWER MOTOR (for Automatic Air Conditioning System)

- (a) Disconnect the blower motor connector.
- (b) Connect the positive (+) lead from the battery to terminal 1 and negative (-) lead to terminal 2, and then check that the motor operates smoothly. If the operation is not as specified, replace the blower motor.

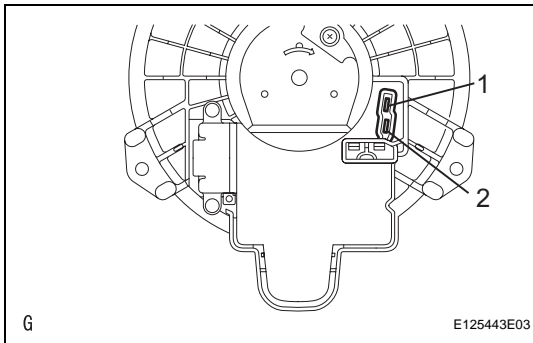

#### 2. INSPECT BLOWER MOTOR (for Manual Air Conditioning System)

- (a) Disconnect the blower motor connector.
- (b) Connect the positive (+) lead from the battery to terminal 2 and negative (-) lead to terminal 1, and then check that the motor operates smoothly. If the operation is not as specified, replace the blower motor.

